HYVA OIL TANKS

SIDE MOUNTED TANK


Hyva

Page 1 / 1

type : part number tank :

working volume :

SM - 201L/170L - AL - MP - MR 140 18 230 170 liters

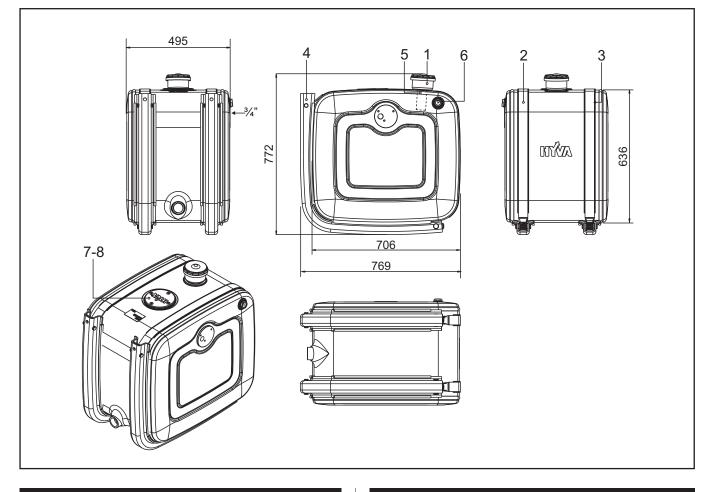

Part list

Pos.	Part no. 140 20 160	Description Mounting kit parts consisting of:	Qty.
1	081 02 116	air breather filter	1
2	140 20 300	straps	2
3	140 20 328	kit for two supports	1
4	140 20 320	tank support	2
Spare	Parts		
Pos.	Part no.	Description	Qty.
5	081 02 117	air filter element	1
6	081 02 121	spy glass	1
7	020 52 431	cover plate	1
8	020 52 432	gasket	1

Optional part

Part no. 147 80 303

Description return filter kit

General information

Pay attention to the following points:

- Mount the tank according the mounting instructions.
- Fill the tank with the recommended hydraulic oil to the centre of the spy glass (level indicator).
- Change the oil once a year.
- Replace the air breather filter twice a year.
- Do not use the tank as a support or to stand on.
- Do not weld to the oil tank.

Specifications

Qty.

1

Gross volume	:	201	Liters
Fill volume		186	Liters
Working volume		170	Liters
Weight tank		17	kg
Weight single support		10	kg
Connections		11⁄2"	BSPIT (Suction)
	:	3/4"	BSPIT (Valve plate)